

How to install the FireStik StrobeStik on your Firestik "StrobeStik-Ready" whip.




1

Insert 1" threaded stud into base of strobe.



2

Turn stud clockwise to tighten.

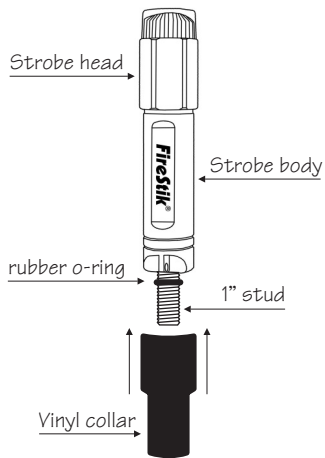


3

Push wide end of vinyl collar over base of strobe.



4

Insert 1/4"-20 adapter into narrow end of sleeve

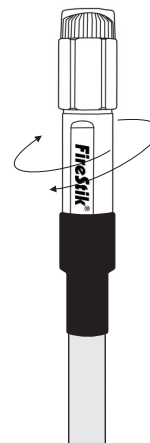

5

Turn strobe body clockwise to tighten.